

## **MOUNTING INSTRUCTIONS**

The rod holder is designed to enter the mounting bracket only when pointing inboard, and is locked in every other direction. To ensure the mounting bracket is correctly positioned, the "Logo" trademark on the bracket should read right way up, when looking from inboard.

When side mounting the rod holder, the bracket should be mounted as close to the gunnel top as possible, to allow full swivel rotation.

When re-assembling your rod holder, make sure the adjusting knob is on the right-hand side of the rod holder (See photographs on box).